


RTX REPEATER AND GIGASET PAIRING GUIDE

- Please note: the below procedure only applies to the Siemens Gigaset models that support repeater mode.
- If repeaters have been daisy-chained, the procedure below only applies to the first repeater i.e. the repeater closest to the Gigaset base.

Notes: Turning Repeater On/Off

- Never plug or unplug the repeater's power at the wall, always unplug at the rear of the repeater using the RJ plug.

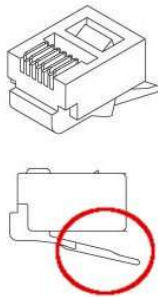

To unplug depress clip before removing

- Never use the wall switch to power the repeater up or down as the internal transformer may disrupt the timing.

Preparation

1. Connect the Gigaset to the mains power and a telephone line
2. Once the Gigaset handpiece has automatically registered to its base, enable repeater mode via the handpiece menu system by selecting either
 - (old models) MENU/SETTINGS/BASE/ADD FEATURE/REPEATER MODE [Tick]
 - (new models) Menu/Settings/ECO DECT/Max Range [Tick]
 - (new models) models released after 2013: disable Encryption. Look under Settings/System/Encryption. The repeater will not register if this step is missed.
3. Connect the repeater to mains power and make sure you see the LED repeating two (2) short flashes then a 1 second pause (ready state), if not you need to reset it (see below)

DX800A will need to have at least one handset paired to the base.

Pairing

1. Disconnect the power cord from both the Gigaset base and the Repeater
2. Connect the power cord back into the Gigaset base
3. Now we need to put the repeater in registration mode by plugging in the power cable at the rear of the repeater waiting 3-5 seconds then unplugging the power cable.
4. Reconnect the repeater power cable, the LED on the repeater should be now flashing slowly. You now have 5-minutes to complete the pairing process before the repeater resets
5. Press and hold the Page Key on the Gigaset base
6. The LED on the Repeater should begin to flash rapidly
7. Up to 6 Repeaters may be paired to a Gigaset base. Select one of the six (6) repeater device slots by pressing a single digit from 2-7 on the Gigaset handset*
8. Press the off-hook (green key)
9. If accepted, the LED on the Repeater will flash a corresponding number of times to the number chosen
10. Press the * key
11. Press the on-hook (red key)
12. The LED should go off for a few seconds, flash briefly and then remain continuously illuminated

****On DX800A you need to select the repeater slot via the cordless handset not the base.***

Placement

You can now disconnect the Repeater from mains power and position it at the desired location to provide additional coverage.

Verification Tone

Make a call while standing next to the repeater. If the call is successfully handled by the repeater, you should hear a verification tone through the handpiece of the Gigaset every few seconds.


Please refer to the RTX Repeater user guide for instructions on how to turn the verification tone off.

Resetting the Repeater

1. The red LED on the repeater should be flashing in a constant on/off cycle when connected to mains power
2. Unplug the power cable
3. Plug in the repeater power cable, wait 3-5 seconds (3 seconds works better than 5)
4. Unplug the power cable
5. Plug in the repeater power cable and now wait 25-35 seconds (slow flashing LED) then unplug the power cable.
6. Plug repeater back in for the final time
7. If the repeater is reset successfully, the LED will constantly cycle two (2) short flashes and then a 1 second pause

Notes: Turning Repeater On/Off

- Never plug or unplug the repeater's power at the wall, always unplug at the rear of the repeater using the RJ plug.

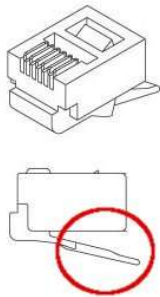

To unplug depress clip before removing

- Never use the wall switch to power the repeater up or down.