

Sennheiser D10 Phone to Mitel 6865i Howto


As well as the D10 Phone headset and the 6865i phone you will also need a Sennheiser



CEHS-DHSG Cable (Part# 504105).



1. Connect the CEHS-DHSG cable to the back of the D10 Phone base

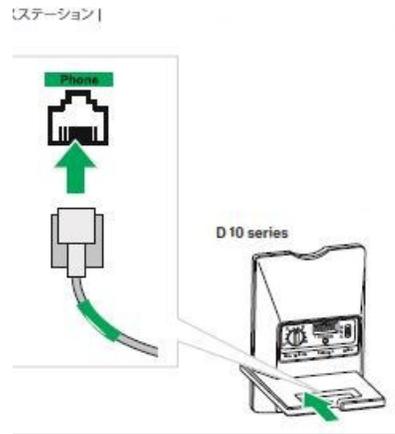

* Note the cable end with the coloured tape needs to be plugged into the headset base.

2. Plug the other end of the CEHS-DHSG cable into Mitel phone headset socket.




Headset Socket


** Note you may have to remove the plastic reducer on the telephone headset socket or the cable wont fit.



3. Set ABC audio termination selector found on Sennheiser D10 base to A

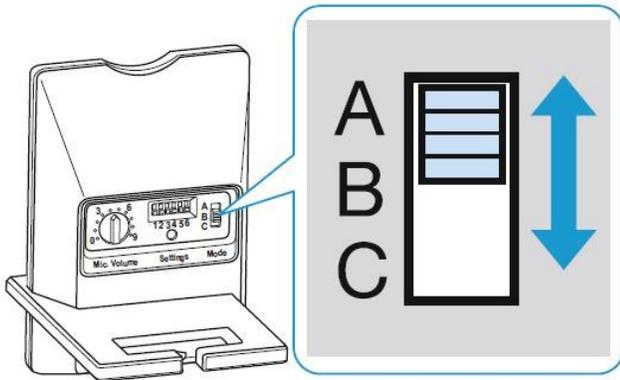

4. Configure D10 phone headset base for DHSG mode

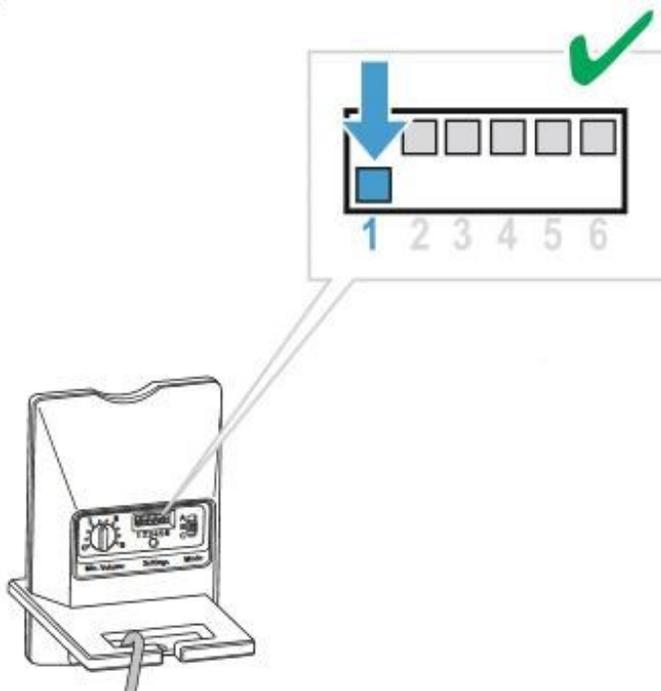



Established 1981

4. Enable DHSG mode on Mitel telephone.

1. Press  on the phone to enter the Options List.
2. Select **Preferences**.
3. Select **Set Audio**.
4. Select **DHSG**.
5. Select the DHSG is OFF or DHSG is ON option. Default is DHSG is OFF.
6. Press the  key or select **▶Set** to save your selection.
7. Then press the up arrow to go back to 'Audio Mode' and select
8. Scroll and Select 'Headset/Speaker'
9. Press the > key to set
10. Reset Telephone to enable DHSG mode

That's it! The headset should now be able to make and receive calls using the EHS functionality.

Connect 2 x Wireless Headset

Mitel 6865i

Parts List

2 x Wireless Headset


2 x DHSG EHS Cable

1 x RJ12 (6P6C) Female to 2 x RJ12 (6P6C) Female Adaptor (Splitter)

1 x RJ12 (6P6C) Male to RJ12 (6P6C) Male Cable



* RJ12 to RJ9 Adaptor has to be removed from the headset socket of the Mitel 6865i

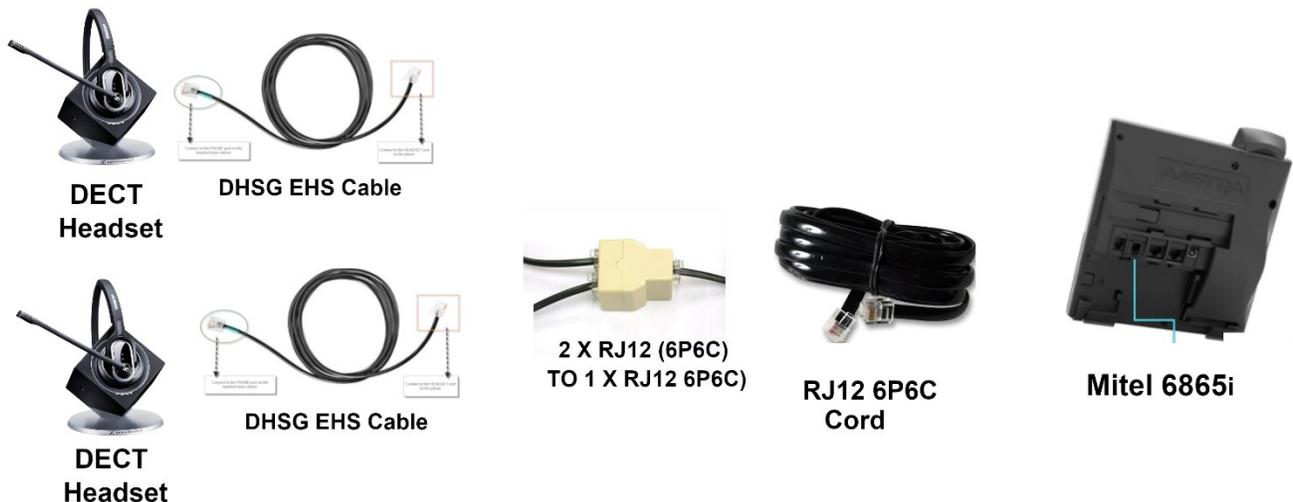

Things to note:

1. Only 1 headset should have DHSG enabled, or it may create protocol conflicts.
2. The RJ9 insert on the Mitel 6865i must be removed or the RJ12 cable won't fit.

WARNING Only configure 1 x D10/DW Phone headset with EHS mode enabled.